


## BARBEN SENSOR: "E" TERMINATION

e.g. (B-V-546-X-XX-X-X-X-E-XX)

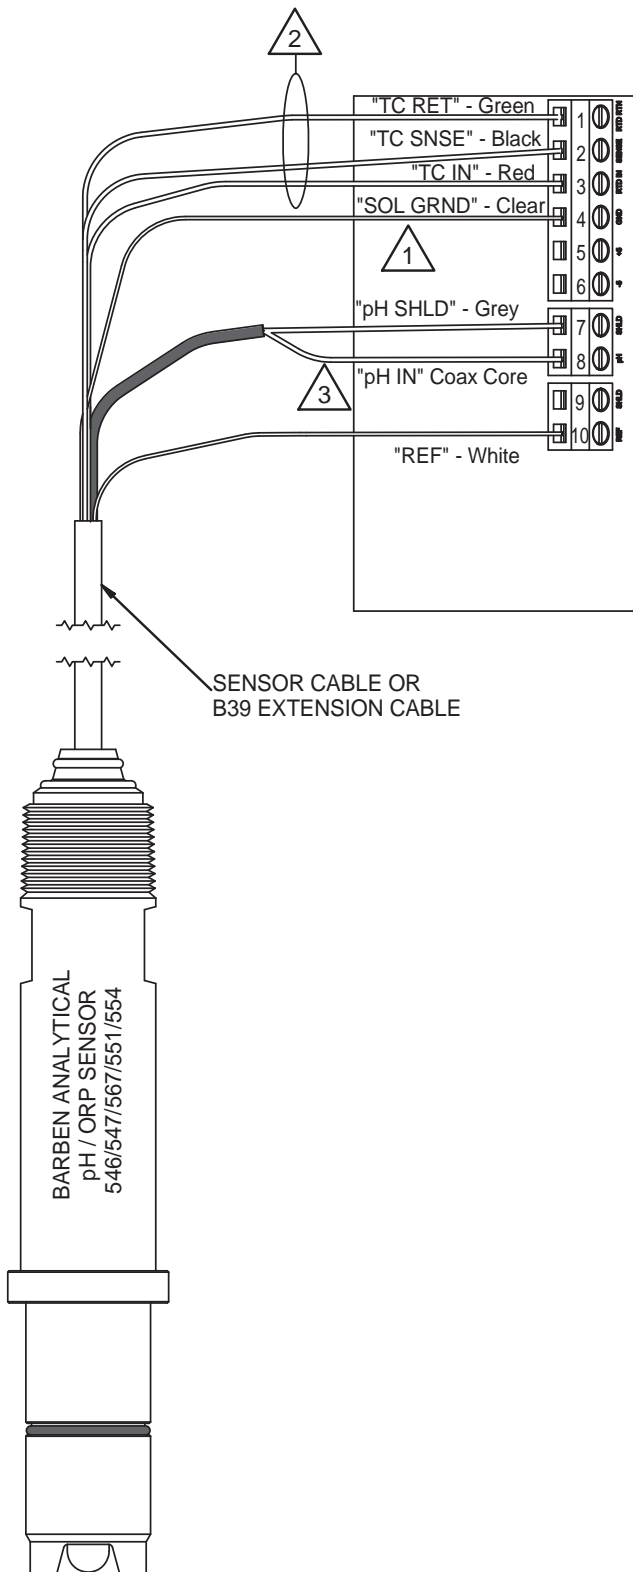

## "IMPORTANT WARNINGS"




THE WIRING SHOWS A SENSOR WITH A SOLUTION GROUND. THIS OPTION IS DESIGNATED WITH WITH "GT", "UT" OR "LT" IN THE MODEL NUMBER.

e.g. (B-V-546-X-LT-X-X-X-X-X)

SENSORS WITHOUT A SOLUTION GROUND HAVE "FT", "ST" OR "DT" IN THE MODEL NUMBER.

e.g. (B-V-546-X-DT-X-X-X-X-X)

**SENSORS WITHOUT A SOLUTION GROUND REQUIRE THAT SENSOR DIAGNOSTICS BE TURNED OFF IN THE TRANSMITTER AND A JUMPER IS INSTALLED AS SHOWN BELOW.**

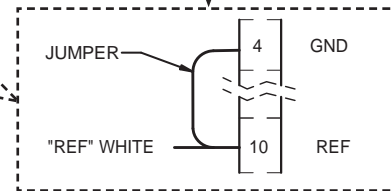

FOR SENSORS WITHOUT TEMPERATURE COMPENSATION DISREGARD TC WIRES. PROGRAM ANALYZER FOR MANUAL TEMPERATURE COMPENSATION.



FOR ORP/REDOX SENSORS COAX CORE WILL BE LABELED AS "ORP IN" AND WIRING IS THE SAME.

## ANALYZER CONFIGURATION & SETTINGS

### • WIRING

#### Sensor Lead

"TC RET" - Green  
 "TC SNSE" - Black  
 "TC IN" - Red  
 "SOL GRND" - Clear (Drain)  
 "pH SHLD" - Coax Shield  
 "pH IN" - Coax Core Shield  
 "REF" - White

#### Analyzer Terminal

(1) RTD RTN  
 (2) RTD SNS  
 (3) RTD IN  
 (4) GND SOL  
 (7) pH SHIELD  
 (8) IN pH/ORP  
 (10) IN REFERENCE


- SELECT PT100 OR PT1000 RTD BASED ON SENSOR
- SELECT AUTOMATIC TEMPERATURE COMPENSATION MODE
- SELECT INTEGRAL PRE-AMP XTMR
- IF SENSOR CABLE > 30 FT PRE-AMP REQUIRED. CONSULT TRANSMITTER MANUAL

# Wiring Diagram

## Rosemount 1057

### BARBEN SENSOR: "C" TERMINATION

e.g. (B-V-546-X-XX-X-X-X-**C**-XX)

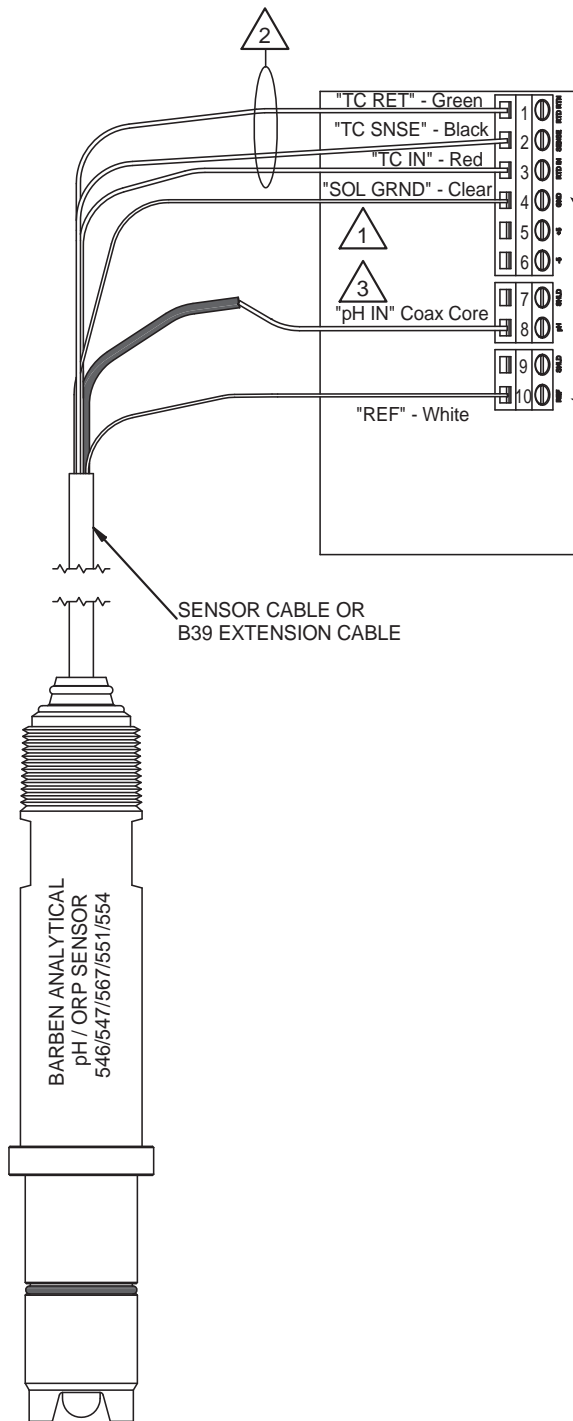

### "IMPORTANT WARNINGS"




THE WIRING SHOWS A SENSOR WITH A SOLUTION GROUND. THIS OPTION IS DESIGNATED WITH WITH "GT", "UT" OR "LT" IN THE MODEL NUMBER.

e.g. (B-V-546-X-**LT**-X-X-X-X-X)

SENSORS WITHOUT A SOLUTION GROUND HAVE "FT", "ST" OR "DT" IN THE MODEL NUMBER.

e.g. (B-V-546-X-**DT**-X-X-X-X-X)

**SENSORS WITHOUT A SOLUTION GROUND REQUIRE THAT SENSOR DIAGNOSTICS BE TURNED OFF IN THE TRANSMITTER AND A JUMPER IS INSTALLED AS SHOWN BELOW.**

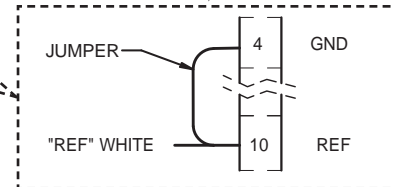

FOR SENSORS WITHOUT TEMPERATURE COMPENSATION DISREGARD TC WIRES. PROGRAM ANALYZER FOR MANUAL TEMPERATURE COMPENSATION.



FOR ORP/REDOX SENSORS COAX CORE WILL BE LABELED AS "ORP IN" AND WIRING IS THE SAME.

### ANALYZER CONFIGURATION & SETTINGS

#### • WIRING

#### Sensor Lead

"TC RET" - Green  
 "TC SNSE" - Black  
 "TC IN" - Red  
 "SOL GRND" - Clear (Drain)  
 "pH IN" - Coax Core Shield  
 "REF" - White

#### Analyzer Terminal

(1) RTD RTN  
 (2) RTD SNS  
 (3) RTD IN  
 (4) GND SOL  
 (8) IN pH/ORP  
 (10) IN REFERENCE

- SELECT PT100 OR PT1000 RTD BASED ON SENSOR
- SELECT AUTOMATIC TEMPERATURE COMPENSATION MODE
- SELECT INTEGRAL PRE-AMP XTMR
- IF SENSOR CABLE > 30 FT PRE-AMP REQUIRED. CONSULT TRANSMITTER MANUAL

Barben Analytical reserves the right to make technical changes or modify the contents of this document without prior notice. We reserve all rights in this document and in the subject matter and illustrations contained within.